

B&D Coding Instructions

Programming a new remote:

Hold down the desired button you wish to operate the door on the new remote. Whilst holding the button down, press and release the code set button which is located on the motor. The code set light on the motor will flash to indicate it has learnt the new remote. Release the button on the remote. Your new remote is now coded.

How to erase all remotes from motor:

Hold the code set button on the motor for approximately 8-10 seconds. The light will flash to indicate all codes have been erased. For gates press and hold the erase button until red LED extinguishes.

Note: This will erase all codes, you cannot erase just one code.